

2005-2009 GT Mustang Lower Replacement Grille # 0511-2002-01 (Brushed) # 0511-2002-05 (Black)

Note: Read installation instructions before starting. Use threadlocker on all screws.



Kit Components:

- (1) Billet Grille
- (4) Phillips-head Screws

- (4) U-Nuts
- (4) Z-Brackets

Tools Needed:

- Flat Screwdriver
- Phillips Screwdriver
- Masking Tape

- Angled Pick Tool
- Thread Locking Compound
- Flat Black Paint (opt)


ORIGINATOR: Jeff Carroll APPROVAL:

REVISION DATE: 05/18/09 ISSUE DATE: 11/26/07 REVISION LEVEL: C PAGE: 1 of 3


CD4II3CF

Remove Upper Lower Grille:

1. Using a Flat Screw Driver and Angled Pick Tool bend back the tabs of the molded fascia to release the tabs of the grille and pull factory grille out of the front of the vehicle.

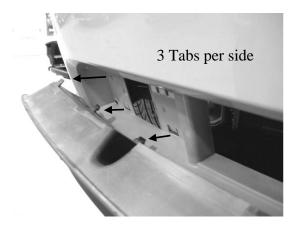

2. For the best overall appearance of your vehicle, we recommend that you black out the outer perimeter as well as the areas behind the lower Grille with Flat Back paint. Tape off fascia along the Inner/Second Feature Line from front (see picture below). Place the CDC Lower Grille into position on vehicle to verify where tape line should be. Tape large enough area to protect painted surfaces around the Grille Opening. Scuff surfaces to increase adhesion of paint.

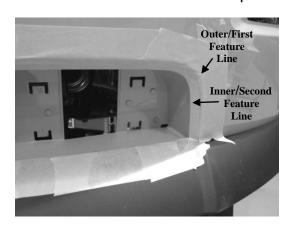



Installation of Grille Hardware and Grille:

ORIGINATOR: Jeff Carroll REVISION DATE: 05/18/09 REVISION LEVEL: C APPROVAL: ISSUE DATE: 11/26/07 PAGE: 2 of 3

CD4II3CF

3. Hold the CDC Lower Grille into position in the Lower Grille Opening to locate the factory tab slots to be used for attaching the CDC Grille. From the backside of fascia, place the long leg of Z-Brackets through the four slots in fascia that were just identified.



4. Install a *U-Nut* onto each front "leg" of the four *Z-Brackets* installed in step 3.

<u>Important!</u> Screw Hole of *U-Nut* MUST be installed on the radiator side of "leg" (facing rear f car).

- 5. Place Billet Grille onto fascia and start all four mounting screws through the Grille's Mount Tabs into brackets, use thread locker on all screws. Just snug screws at this time.
- 6. Adjust grille in fascia opening until desired location is achieved.
- 7. Tighten all mounting screws at this time.

Caution! DO NOT OVERTIGHTEN SCREWS!

8. Enjoy your new CDC Lower Grille!



Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation please contact

Tech@classicdesignconcepts.com or call 866-624-7997

ORIGINATOR: Jeff Carroll REVISION DATE: 05/18/09 REVISION LEVEL: C APPROVAL: ISSUE DATE: 11/26/07 PAGE: 3 of 3