



2010-14 Mustang Rear Deck Lid Trim Panel

CDC #: 1011-7005-01



About the Product:

This product is designed and manufactured by Classic Design Concepts. The panel is Injection Molded Urethane that is ready to be installed. If you choose to paint this product, we recommend the part be painted by a professional automotive paint facility to maintain the quality of the part. Recommended bake cycle temperature of 150° F or less. Please read instructions before installation and test fit part before painting.

Kit Component:

- Pre-Taped Trim Panel
- Adhesive Promoter Packet
- Alcohol Packet
- Instruction Guide

Tools Required:

- Masking Tape
- Side Cutters (if installing 2013-2014)
- Plastic or Wood Wedge
- Clean Cloth
- Heat Gun or Hair Drier

Attention:

CDC Deck Lid Trim Panel material is pliable and will conform to the shape of Deck Lid upon installation. Failure to follow instructions may result in loss of this product. Classic Design Concepts is not responsible for improperly installed Deck Lid Trim Panel. Deck Lid Trim Panel must be installed at a temperature of 70°F or above. If necessary, warm the vehicle and Trim Panel areas with a heat gun or hair dryer.

Removal of faux Gas Cap: (2010-2012 models)

1. Tape area around emblem (Figure 1).
2. Warm emblem with a heat gun or hair drier (Figure 2). **Do NOT over heat.**
3. Insert a plastic or wooden wedge between the emblem and Deck Lid to remove (Figure 3).
4. Clean Deck Lid and wipe with isopropyl alcohol to remove wax. **It is imperative that any wax be removed from the vehicle at the tape contact areas for proper adhesion.**

Apply adhesion promoter to the bonding area. **Caution: Do not apply Adhesion Promoter above bonding area; it will leave a visible residue. Excess can be cleaned with wax and grease remover if needed.**

Fig.1



Fig. 2



Fig. 3



Removal of stock Trim Panel (2013-2014 models):

1. With Deck lid open, remove the (2) Philips screws that secure the lower corners of the factory trim panel. (Screws will not be reused.)



2. Remove factory panel. Use a flat panel tool, preferably plastic to release the clips from back side of the factory panel. The second image shows a close up of the clips.




Installing Rear Deck Lid Trim Panel:

1. Create pull-tabs by peeling approximately 2” of red backing from the 2 individual tape runs on the backside of the Deck Lid Trim Panel (Figure 4).

Note: Molded ribs on back side of part will need to be removed for 2013-2014 models. Simply remove with side cutters.

Fig. 4

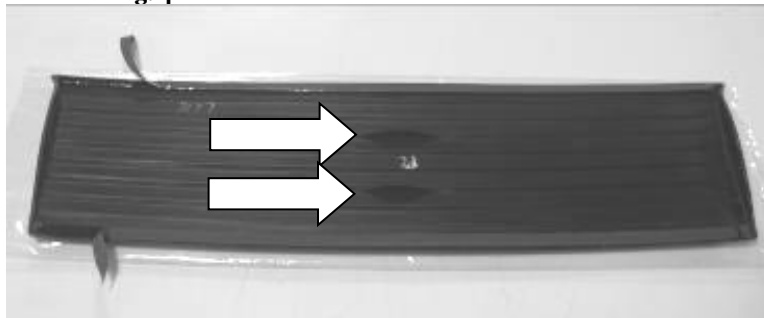

2. Center the Trim Panel on Deck Lid side to side. Once proper location has been achieved, pull the red backing from the tape and press Trim Panel to deck lid. Once again go over the Trim Panel and firmly press over the tape areas to seat the Acrylic Tape.

**Thank you for choosing Classic Design Concepts for your restyling needs.
If you have any questions or concerns regarding installation please contact
Tech@CDCdetroit.com or call 866-624-7997**